

PROGRAMMING INSTRUCTIONS

MASTER CODE COMMANDS

CHANGE THE MASTER CODE

Master Code • 01 • New Master Code • New Master Code ••
Example: # 11335577 • 01 • 12345678 • 12345678 ••
Result: Master Code has been changed to 12345678.

SET OR CHANGE THE USER CODE

Master Code • 02 • User Code ••
Example: # 11335577 • 02 • 9999 ••
Result: New User Code 9999 now operative.

DELETE USER CODE

Master Code • 03 ••
Example: # 11335577 • 03 ••
Result: User Code deleted.

SET OR CHANGE THE SUB-MASTER CODE

Master Code • 04 • Sub-Master Code • Sub-Master Code ••
Example: # 11335577 • 04 • 87654321 • 87654321 ••
Result: Sub-Master Code 87654321 now operative.

DELETE THE SUB-MASTER CODE

Master Code • 05 • 05 ••
Example: # 11335577 • 05 • 05 ••
Result: Sub-Master Code deleted.

SUB-MASTER CODE COMMANDS

CHANGE THE SUB-MASTER CODE

Sub-Master Code • 06 • New Sub-Master Code •
New Sub-Master Code ••
Example: # 87654321 • 06 • 10101010 • 10101010 ••
Result: Sub-Master Code has been changed to 10101010.

SET OR CHANGE THE USER CODE

Sub-Master Code • 07 • User Code ••
Example: # 87654321 • 07 • 6666 ••
Result: New User Code 6666 now operative.

DELETE USER CODE

Sub-Master Code • 08 ••
Example: # 87654321 • 08 ••
Result: User Code deleted.

USER CODE COMMANDS

CHANGE THE USER CODE

User Code • New User Code • New User Code ••
Example: # 2244 • 6688 • 6688 ••
Result: User Code now 5541.

SPECIAL MASTER CODE COMMANDS

SET B) PUBLIC USE

Master Code • 09 ••
Example: # 11335577 • 09 ••
Result: The lock will now remain open until the next user enters their own personal code into the lock as follows:
Step 1 - Enter 4 digit code • close the locker which will now be locked.
Step 2 - Enter the same 4 digit code •• the lock will now open and remain open until next 4 digit code is entered.
Note: The Master Code and Sub-Master Code will be retained from A) Private Use.

RESTRICT THE LOCKED TIME

Master Code • 10 • (number of hours lock to remain locked)
Example: # 11335577 • 10 • 04 ••
Result: The lock will auto open after 4 hours. If a new User Code is entered it will relock for 4 hours. If the lock is opened during the 4 hour period then the lock remains open until a new User Code is entered.
Note: This program only works when the lock is set in B) Public Use Function. The lock can be set to remain locked for 02, 04, 06, 08, 10 or 12 hours.

SET A) PRIVATE USE

Master Code • 11 ••
Example: # 11335577 • 11 ••
Result: The lock will revert back to default function A) Private Use Function. Factory set User Code 2244 will now work repeatedly until reprogrammed.

SET TECHNICIAN CODE

Master Code • 12 • Technician Code • Technician Code ••
Example: # 11335577 • 12 • 555555 • 555555 ••
Result: The lock is automatically set into B) Public Use Function and allows the programmed Technician Code to open the lock WITHOUT the entered single use code being erased.
Note: If lock is opened with a Master Code the User Code will be erased.

DELETE THE TECHNICIAN CODE

Master Code • 13 • 13 ••
Result: Technician Code deleted.



NANO90

Programming
& Operating
Instructions

Kit-Lock
Coded Locker Solutions

CODES - THE BASICS

- The KitLock NAN090 has four code levels available:
 - Master Code
 - Sub-Master Code
 - User Code
 - Technician Code
- The NAN090 is supplied with two factory set codes:
 - Master Code: 11 33 55 77
 - User Code: 22 44
- When fitted immediately change the Master Code and User Code.
- All Master Codes and Sub-Master Codes are 8 digits long.
- All User Codes are 4 digits long.
- All Technician Codes are 6 digits long.
- The lock 'open' time is set at 4 seconds.

FUNCTIONS

Before programming select the most appropriate function for the application.

A) PRIVATE USE

Important Note: This is the default function and is already pre-programmed in new locks.

This is the most common function and is used where the **same code will be repeatedly used.**

B) PUBLIC USE

The user enters their own personal four-digit code. This locks the lock. The same code is entered to open the lock before being erased and ready for the next new user.

This function is used for short term, multi occupancy applications, e.g. hot desking in an office or a locker in a leisure centre.

OPERATING INSTRUCTIONS

The NAN090 has a 10 button keypad, * and # button. The * and # buttons are only used for programming functions.

- Every program command must commence by pressing the # button.
- If necessary the # button may be used to clear a previous entry if a mistake is made.
- To enter a valid code, 10 seconds are allowed between each button input; otherwise the program will once again clear.

CODES

The NAN090 KitLock has the following code levels:

A) MASTER CODE

The Master Code can:

- Open the lock
- Change the Master Code
- Set / Change / Delete the Sub-Master and User Code
- Select between Private and Public Functions
- Set or delete Technician Code

B) SUB-MASTER CODE

The Sub-Master Code can:

- Open the lock
- Change the Sub-Master
- Set / Change / Delete / the User Code

- Blue LED = Code accepted
- Red LED = Code rejected

C) USER CODE

The User Code can:

- Open the lock
- Change the User Code

D) TECHNICIAN CODE

The Technician Code can:

- Open the lock in Technician mode without erasing User Code when in B) Public Use Function.

The same code cannot be programmed into more than one level.

LOST CODE PROCEDURE

Note: The procedure requires the door to be open.

- Remove the rear fixing bolts and remove the lock from the door.
- Remove battery.
- Press and hold the * button, replace the battery, the Blue LED will flash twice, release the * button. Within three seconds press the * button three times. The Blue LED will flash twice and the lock will have reverted to the factory Master Code 11 33 55 77 and all other stored settings will be erased.

PENALTY TIME

- Entering three incorrect codes will cause the lock to shut down for 10 seconds.


BATTERY POWER

- The KitLock should provide well in excess of 100,000 openings, of 4 seconds each, from 1 x coin cell.

LOW BATTERY

- When the battery power is low the • Red LED will flash three times before the • Blue LED lights accepting the code. Fit a new battery as soon as this happens.

The lock will operate for 100 times with low battery.

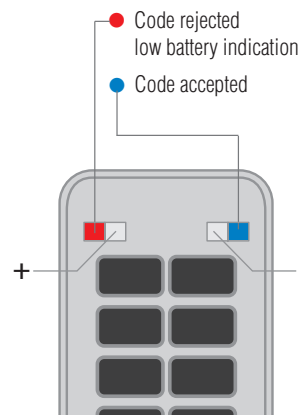

BATTERY FAILURE OVERRIDE

The NAN090 has been designed so a PP3 battery can be placed against the external contacts so that the lock can be opened to replace the battery should it fail.

THE PROCEDURE IS AS FOLLOWS:

- Place the contact points of the PP3 battery against the contact points next to the LED's.
- The positive +PP3 terminal against the Red LED contact point, and the negative -PP3 terminal against the Blue LED contact point.
- Enter the Master Code.
- The lock will now withdraw the locking pin allowing the lock to open.
- Fit new battery by removing lock from the door. Refit the lock.

CODELOCKS HEADQUARTERS

Tel: +44 (0) 1635 239645
Fax: +44 (0) 1635 239644
sales@codelocks.co.uk
www.codelocks.co.uk

Helpline, service & spares
Freephone: 0800 393 405

CODELOCKS INC US

Tel: +1 714 979 2900
Fax: +1 714 979 2902
sales@codelocks.us
www.codelocks.us

Helpline, service & spares
Toll free: 1.877.codelock

CODELOCKS (Australia) PTY LTD

Tel: +61 2 9882 1009
Fax: +61 2 9882 6030
sales@codelocks.com.au
www.codelocks.com.au

Helpline, service & spares
Toll free: 1800 052 131

